

User Manual





Welcome to BAGTAG. Your device works in combination with the BAGTAG app and with connected airlines. For a list of connected airlines, please check our website.

To activate your BAGTAG, download the BAGTAG mobile application in the Apple App Store or Google Play Store.

What is in the BAGTAG box?

- Your BAGTAG
- · Attachment plate
- · 4x Self-tapping screws
- · 4x Screw studs





Activate your BAGTAG

Button

The button on your BAGTAG has two functions:

- Pressing it once activates Bluetooth communication for 15 seconds
- Pressing it three times in rapid succession blanks the screen. This means your baggage information is not visible. Pressing it three times again brings back the information.



Location on your case

Location on case


The BAGTAG should be attached on the narrow, long side of your suitcase as indicated on the image.

There are 3 different methods to attach the BACTAG.




Attach to the BAGTAG Belt

- Clean the surface of the attachment plate & make sure it's dry.
- Place one band of your luggage belt in the gap of the attachment plate.
- Remove the two outermost segments of the 3M adhesive tape.
- Firmly press the BAGTAG on the attachment plate and belt.
- 5. Let rest for 12 hours.

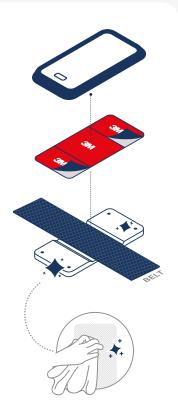


Attach to a hard shell case

- Find a clear and flat surface that fits the BAGTAG.
- Clean the surface of the desired location on your suitcase & make sure it's dry.
- Remove all three segments of the 3M adhesive tape.
- 4. Firmly press the BAGTAG on the desired surface.
- 5. Let rest for 12 hours.

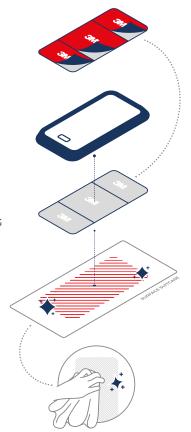

Attach to a soft shell case

- Put the attachment plate, with the gap facing downwards, on the desired location on your suitcase.
- 2. Firmly screw the 4 screws through the holes of the plate and your suitcase.
- Place the screw studs over the sharp ends of the screws on the inside of your suitcase.
- 4. Clean the attachment plate & make sure it's dry.

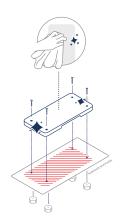

5. Remove all three segments of the 3M adhesive tape.



- 6. Firmly press the BAGTAG on the attachment plate.
- 7. Let rest for 12 hours.

